

Basic Installation Guide

(Rev.1.1) Push Button for Cash Drawer Release 24V, metal with cable / EVA0008

• Warnings and Cautions

⊘	<ol style="list-style-type: none"> 1. Avoid metal contact with device connectors 2. Use the device outside the environment with flammable gases
⚠	<p>If the following situations occur, immediately shut down the host computer, unplug the device, and consult your nearest dealer.</p> <ol style="list-style-type: none"> 1. Smoke, unusual odor or sounds coming from the device 2. Dropping the device with visible damage to the cover <p>Never do the following:</p> <ol style="list-style-type: none"> 1. Do not use the device in extremely humid places, or expose it to excessive temperature changes. 2. Do not use the device in extremely humid places, or expose it to excessive temperature changes. 3. Do not place the device in an oily or steamy environment such as kitchen, etc. 4. Do not leave the device without adequate ventilation, under the cloth, in any cover or package. 5. Do not insert foreign objects or pour water into the device openings. 6. Do not touch or carry this device with your hands wet. 7. Do not use anti-slip gloves containing plasticizers when working with this device. 8. Never use organic solvents such as gasoline, thinners, insecticides, etc. for cleaning. This could result in fire or electric shock. 9. Do not pull or unnecessarily bend the connecting cables or place heavy objects on them. <p>Do not look into the light sources of the device and do not point the light source at the eyes of others. This may cause irreversible eye damage.</p>
⊘	<p>Do not leave the device in unstable locations where there is a risk of falling and consequent danger of injuring people.</p>
⚠	<p>Once damage to the power cord is detected, such as damage to the insulation, stop using the device immediately and contact your dealer. Fire or electric shock could occur.</p>

• Basic Information



This guide provides a brief overview of the information necessary to install the product. More detailed information about the product can be found at www.virtuos.cz/download.

• Features

This button has been designed to open Virtuos cash drawers without need of using POS system. 24V power supply is included. Connection cable (2 m length) is equipped with RJ50 10p10c connector that can be directly used for cash drawers Virtuos, i.e. there is no need to use any other cable at all. The 24V cash drawers with fixed cable (e.g. Virtuos S-410) can be connected via connector GJB1029.

The controller is a solid metal structure with the possibility of screwing e.g. to the top of the desk.

Do not hold the button pressed for more than 20 seconds.

• Package Content

The package includes:

→ Push Button with connection cable (2 m)

→ Power supply 24V



Push button with cable

Power supply 24V

• Dimensions

