

Virtuos HT-310A –POHODA RS-232+CR

Načítejte postupně od shora doů !



2.1 Interface Selection



2.3.2 Message Terminator for RS232 interface



The Postamble Installation (Default:00)



Nastavení v systému POHODA – výběr portu dle správce zařízení

The screenshot shows the POHODA Kasa Offline - [Hardware] application window. The 'Zařízení' (Device) tab is selected, displaying the 'Čtečka čárových kódů' (Barcode Reader) settings. The 'Zapnuto' (On) checkbox is checked. The 'Nastavení čtečky čárových kódů' (Barcode Reader Settings) section shows the following configuration: Sériový port (Serial port) is set to COM15, Parita (Parity) is set to nic, Počet datových bitů (Data bits) is 8, Počet stop bitů (Stop bits) is 1, and Rychlost přenosu (Baud rate) is 9600. A red arrow points to the COM15 dropdown menu. In the background, the 'Správce zařízení' (Device Manager) window is visible, showing the 'Porty (COM a LPT)' section with 'STMicroelectronics Virtual COM Port (COM15)' selected, also indicated by a red arrow.