

Virtuos HT-10 & HT-900A – prefix TAB, term CR+LF

(for TRIFIDsw)

Start Configuration((+SETF)) 


Set All default((+RETF))

End Configuration((+ENDF)) 

Start Configuration((+SETF)) 


Česko((+B2P))

End Configuration((+ENDF)) 

Start Configuration((+SETF)) 

The Preamble Installation (Default:00)


Appendix A((+E4A))


0


9

End Configuration((+ENDF)) 

Start Configuration((+SETF)) 

Message Terminator for keyboard &USB interface


None((+B9A))

End Configuration((+ENDF)) 

Start Configuration((+SETF)) 

The Postamble Installation (Default:00)


Appendix A((+E5A))

CR Carriage return



0



A

LF line feed



0



D

End Configuration((+ENDF)) 