

Virtuos HW-855A – nastavení pro Mediox SW



Restore default CCD module



Factory default for wireless module

⌚ čekejte 5 sek. ⌚

Nastavení jazyka



ALT Mode ON -Universal language

ALT Mode must be set for send low ASCII chars like ETX, STX, LF ...

Terminator character



None

Set Prefix = <



Add Prefix Setting




^&43C&^

<



Saved and Finished Set

Set Suffix =>

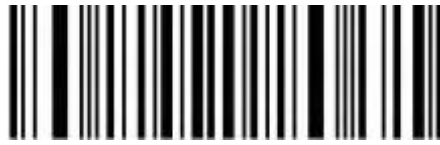

Add Suffix Setting



^&43E&^

>



Saved and Finished Set

Control Character Output for GS Control



Enable