

Virtuos HW-310 – prefix TAB, Term CR+LF

pro software TRIFID



Start Configuration(+SETF)



Set All default(+RETF)



Terminator CR+LF(+C9B)



End Configuration(+ENDF)



Function key Table (Under Function ON)



Start Configuration(+SETF)



The Preamble Installation - Appendix A(+E4A)



0



9



End Configuration(+ENDF)
